

ROYAL 650 – How to Set Selection Prices

- 1) Push mode button on the control board located inside the machine. The button will be blue or yellow.
- 2) Go to the front of the machine (**DO NOT CLOSE THE DOOR**).
- 3) Press selection button number 1 until "**PRIC**" comes up. *If "**PRIC**" doesn't come up go to step 4-otherwise skip to step 5.*
- 4) If "**PRIC**" does not show up in the list, find "**PASS**". Enter the password "3 4 2 3 1" using the selection buttons on the front. When you press the 3 the display will go blank, then enter the code 4 2 3 1. "**CASH**" will appear (if it does not, try again). Once you have "**CASH**" use button #1 to find "**PRIC**".
- 5) At the "**PRIC**" display, press button #3 (display will say "**ALL**").
- 6) Use button #1 to go to the selection you want to change, example P1.
- 7) Once at the selection press button #3 again (display will show the price).
- 8) Use button #1 to go up in price & use button #2 to go down in price.
- 9) Once the price you want is showing, press button #3 and hold for **2 SECONDS** (until the display flashes back the selection number you have just repriced, if it does not you need to repeat this step).
- 10) Now that selection is finished and you can continue on to the next selection (P2, P3, P4 etc) by following the steps above starting at Step 7.
- 11) When you are finished, just close the door and the machine will go back into the vend mode by itself.