

UCB Keypad Programming Charts

Rev 3.0 – 6-12-14

1 .,.:;	↑ 2 ABC	3 DEF
← 4 GHI	5 JKL	6 → MNO
7 PQRS	8 ↓ TUV	9 WXYZ
0 b BS EOL	C/CE ENTER	

VE5860 – AP 123

← A	↑ B	C →	D
E	↓ F	G	H
1 .,.:;	2 ABC	3 DEF	4 GHI
5 JKL	6 MNO	7 PQRS	8 TUV
9 WXYZ	10 b BS EOL	△	▽ ENTER

VE5865 – AP LCM

1 .,.:;	↑ 2 ABC	3 DEF
← 4 GHI	5 JKL	6 → MNO
7 PQRS	8 ↓ TUV	9 WXYZ
* CLEAR ENTER	0 b BS EOL	# NOT USED

Revision Door (All Models)

Press and hold small push button on harness board for **5 seconds** to enter program mode

1 .,.:;	2 ABC ↑	3 DEF	4 GHI
5 JKL ←	6 MNO	7 PQRS →	8 TUV
9 WXYZ	0 B – Blank BS – Backspace EOL – End of Line ↓	RESET ENTER	

VE5830 – Rowe 5900

Press and hold small push button on harness board for **5 seconds** to enter program mode

A ↑	1 .,.;
B ↓	2 ABC
C →	3 DEF
D ←	4 GHI
E	5 JKL
F	6 MNO
G	7 PQRS
H	8 TUV
J	9 WXYZ
K ENTER	10 B - Blank BS - Backspace EOL - End of Line

VE6855 – AP 110 Series

Press and hold small push button on display board for **5 seconds** to enter program mode.

A ↑	1 .,.;	6 MNO
B ↓	2 ABC	7 PQRS
C →	3 DEF	8 TUV
D ←	4 GHI	9 WXYZ
E	5 JKL	10 b BS EOL
F		
G		ENTER

VE5844

VE5840 – National 145-146

Press and hold small push button on display board for **5 seconds** to enter program mode.

A	B ↑	C
D ←	E	F →
G	H ↓	J
1 .,.;	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ
*	0 B - Blank BS - Back Space EOL - End of Line	# ENTER

VE5880 – National 147-148

VE5885 – National 157-158

VE5890 – National 167-168

Press and hold small push button on harness board for **5 seconds** to enter program mode


A ↑	1 .,.;	2 ABC
B ↓	3 DEF	4 GHI
C →	5 JKL	6 MNO
D ←	7 PQRS	8 TUV
E	9 WXYZ	10 B - Blank BS - Backspace EOL - End of Line
F	11	12
G	13	14 Enter


VE5850 – AP 6000-7000


1 .,.;	↑ 2 ABC	3 DEF
← 4 GHI	5 JKL	6 → MNO
7 PQRS	8 ↓ TUV	9 WXYZ
* NOT USED	0 b BS EOL	# CLEAR ENTER

AMS

PROGRAMMING INSTRUCTIONS
Place and leave in machine for reference

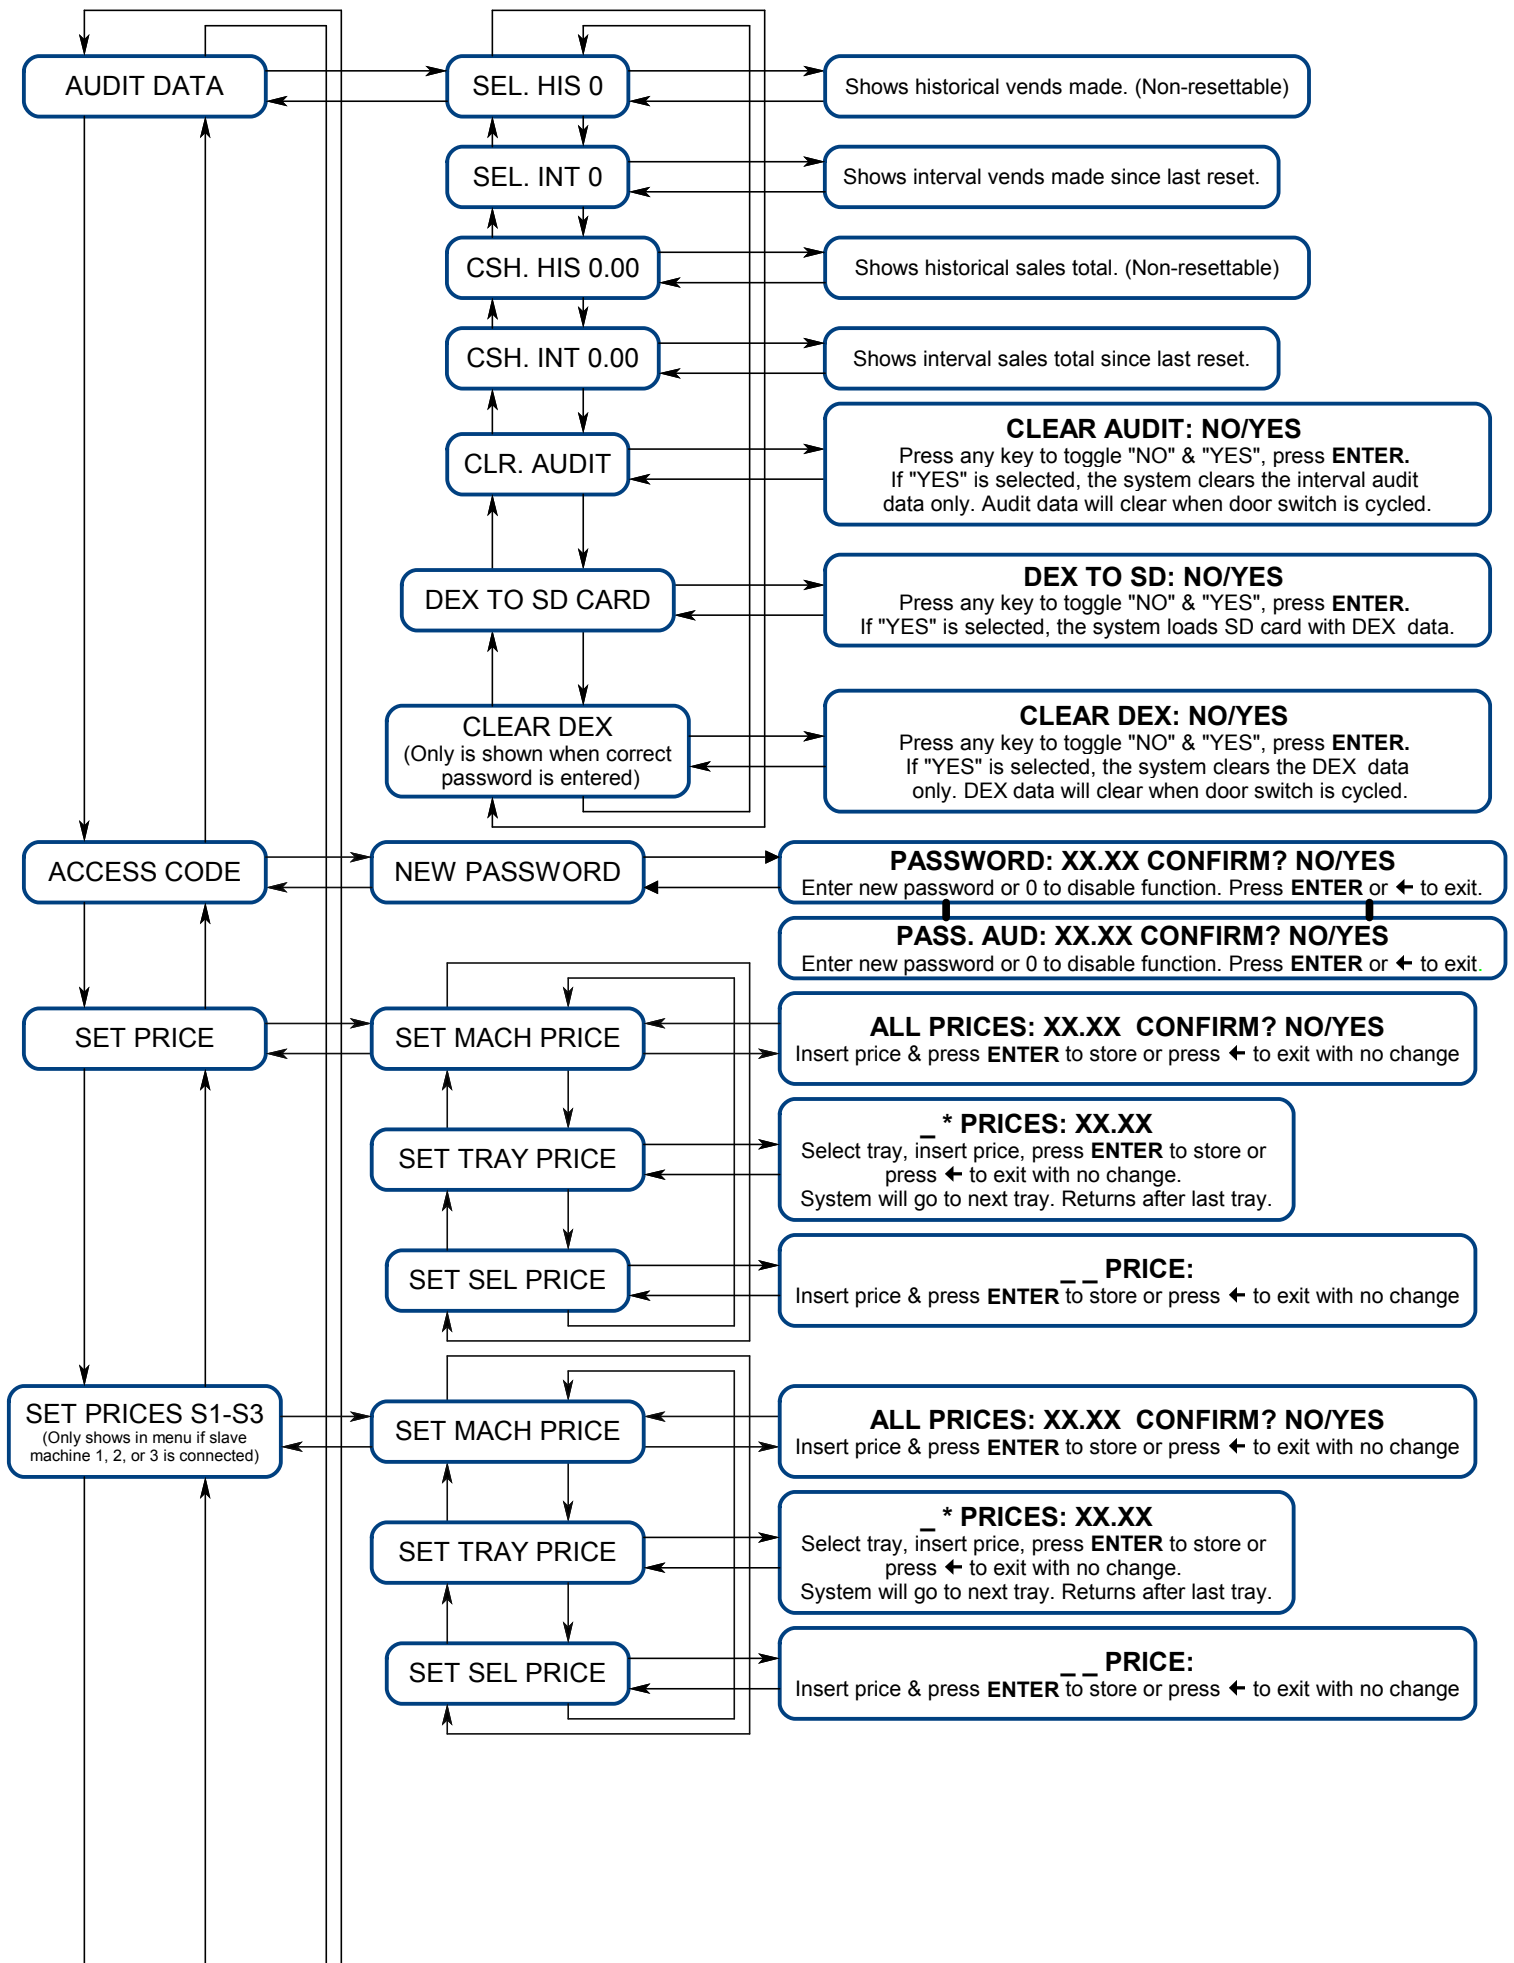

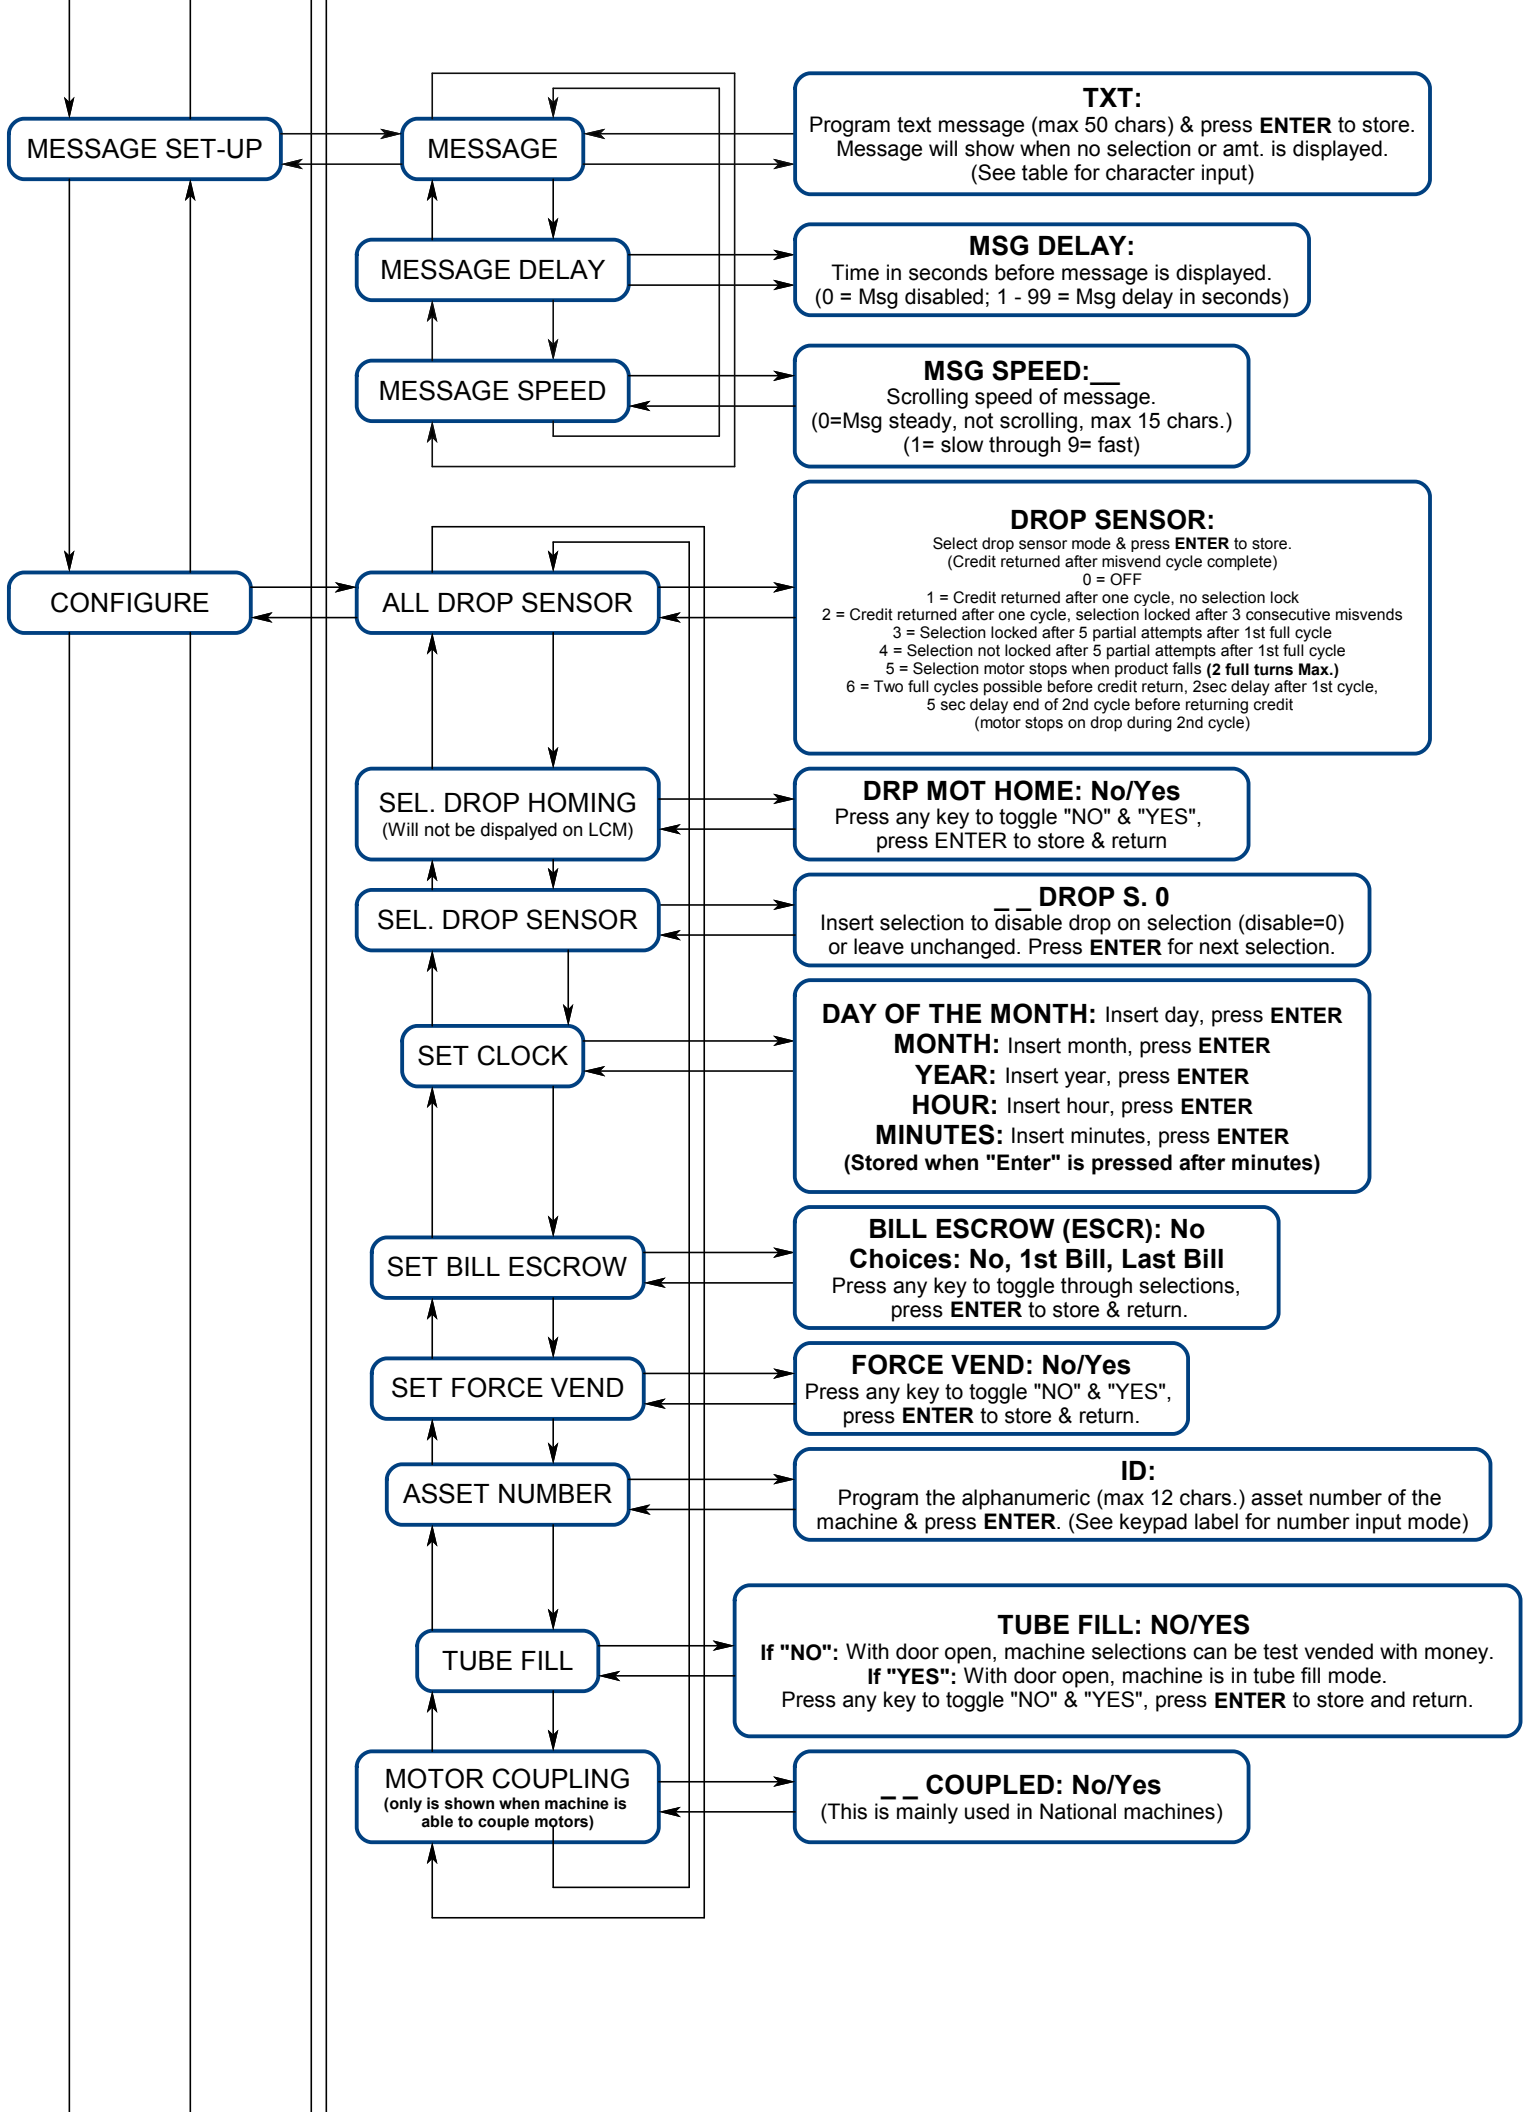

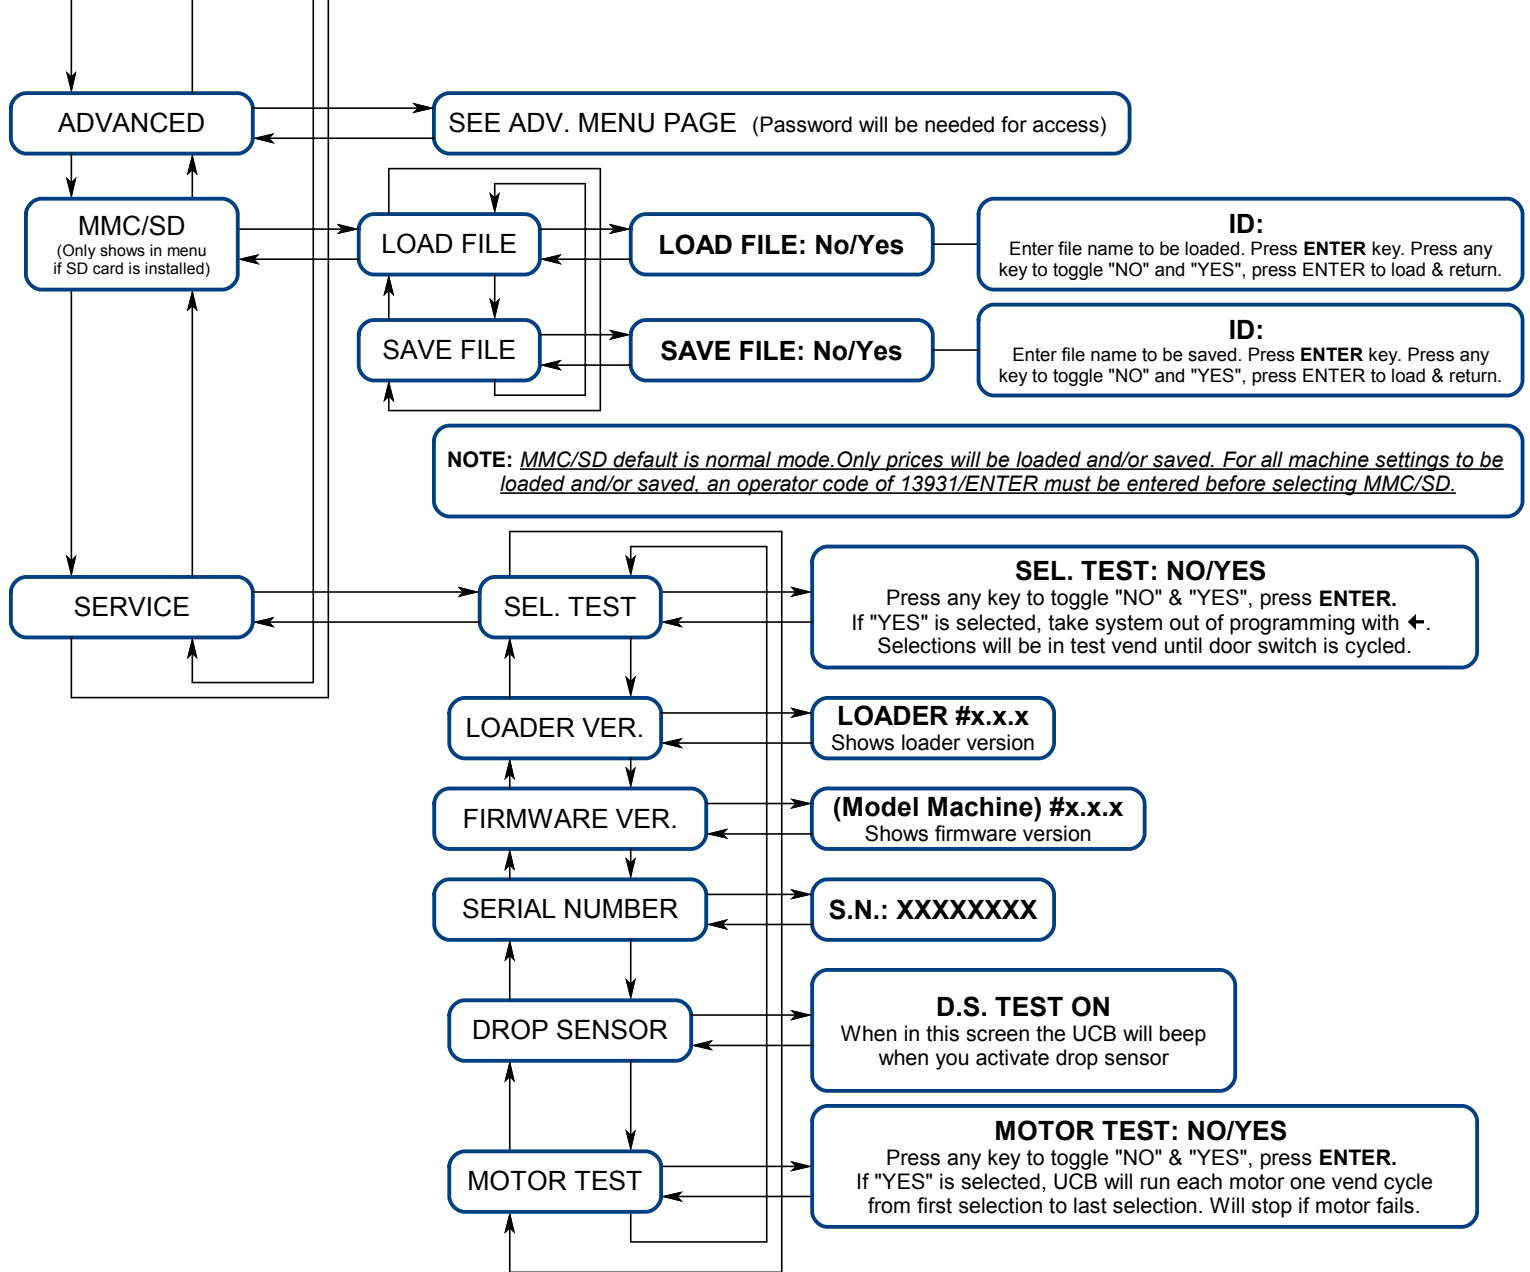

ADVANCED PROGRAMMING INSTRUCTIONS
Place and leave in machine for reference

