


## V21 Side Spacer Installation Instructions

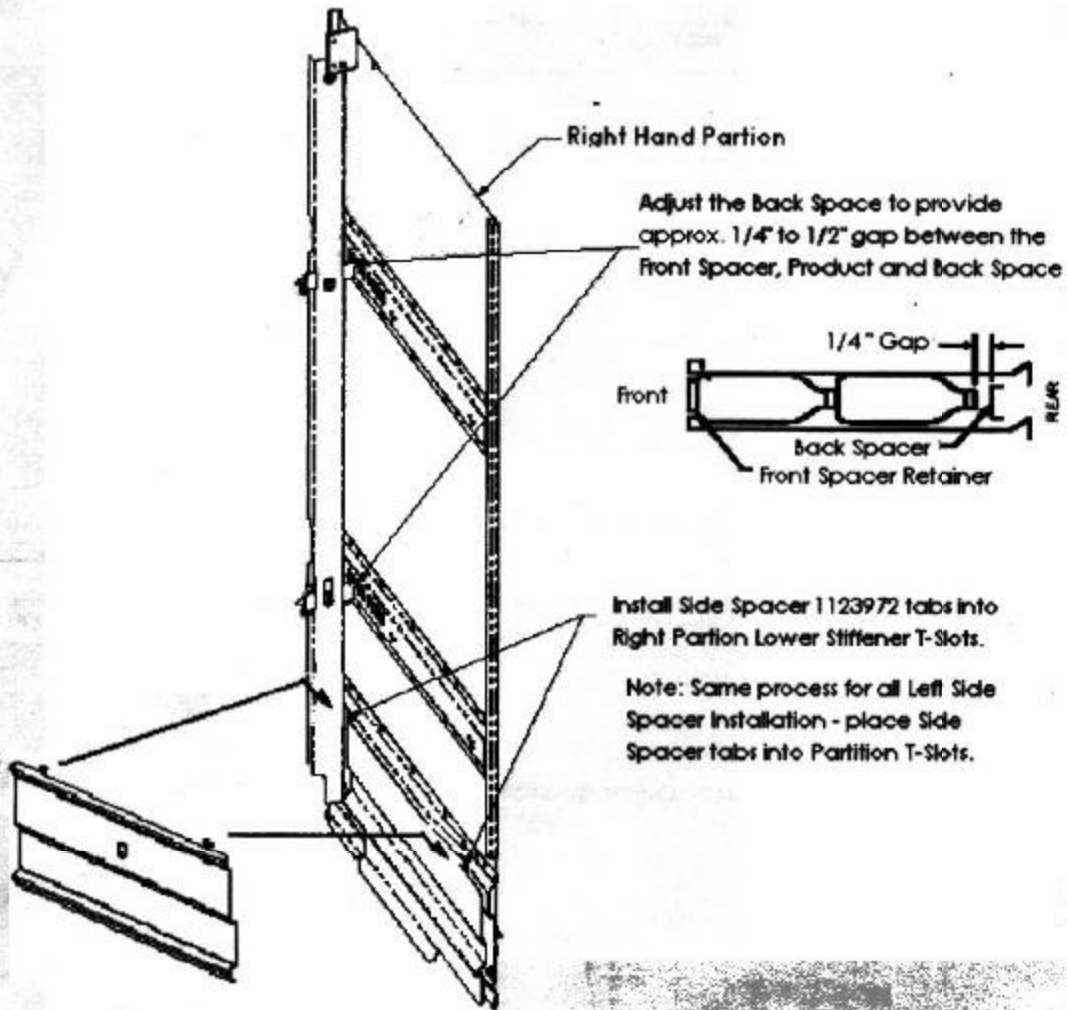

### V21 STACK SETTING FOR 8.4oz CAN,RED BULL

- 1 DEPTH: 3
- 2 BACK SPACER: 7
- 3 PRODUCT STEP/SLIDER: FORWARD
- 4 SPACERS & LOCATION: 1125972 (Middle Left Side Partion),  
1123123 (Top & Bottom Left Side Partion) & 1123972 (Bottom Right Side Partion).